


This mount is intended for panel mounting using a hook device.

**Note:** Sign mounts 2" from top of panel. This method is not recommended for panels over 66" high. Taller panels should use mounting methods A, B, C, or E.

1. Remove either end cap from sign. Locking end caps will require a locking pin or screw driver to remove end cap, depending if the sign is thin or standard.
2. Slide hook device into top track of sign. Replace end cap. Signs 15" and wider require 2 hooks.
3. Center hook device and mount sign.

If you have any questions regarding installation, please contact our Technical Support Department at 800/777-4310.

Typical Application:

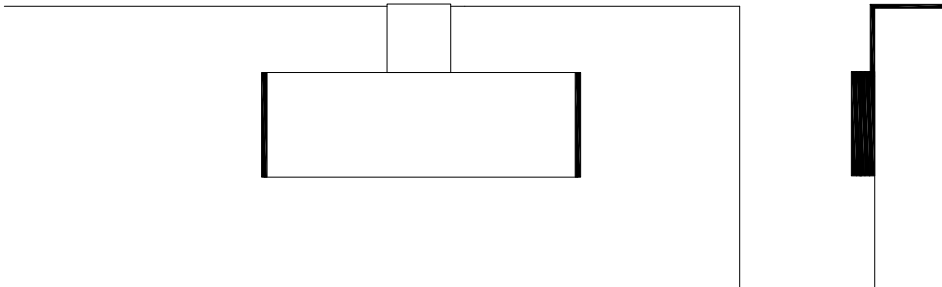

**IMPORTANT:** Prior to installation, remove all contents from box and inspect each sign for damage. Box should contain signs, hardware, and mounting instructions for each style of mount used. Surface of the sign must be handled with care. Clean with water and mild detergent.

CUSTOMER IS RESPONSIBLE FOR SUITABILITY OF EACH MOUNTING OPTION.  
TESTING IS RECOMMENDED PRIOR TO EACH USE.